



# User Manual

## **Products:**

**AS730PBT-BK / AS730PBT-BL**

**AS730PBT-PK / AS730PBT-SF**

**AS730PBT-TN**

**Portable Speaker**

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have questions or need assistance, please call  
customer service at (800) 243-0409



# Contents

1.	Important Safety Instructions .....	4
1.1	Safety .....	4
1.2	Warning .....	6
2.	Package Contents .....	8
3.	Identifying the Parts .....	9
4.	Power supply (built-in battery) .....	11
5.	Bluetooth Operation .....	12
6.	Auracast Operation .....	13
7.	Troubleshooting .....	14
8.	Specifications .....	15

# 1. Important Safety Instructions

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	<b>AVIS</b> RISQUE DE CHOC ÉLECTRIQUE NE PAS PUVIR	
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b>			



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## 1.1 Safety

- 1 **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- 2 **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- 3 **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- 4 **Follow all instructions** – All operating and usage instructions should be followed.
- 5 **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat. Do not place the product in direct sunlight.
- 9 This product is not intended for use by persons (including young children) with

reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instructions concerning the use of the product by a person who is responsible for their safety.

- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 16 The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
- 17 Minimum distance around the apparatus for sufficient ventilation is 5cm.
- 18 The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc...
- 19 No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 20 Batteries should be recycled or disposed of as per state and local guidelines.
- 21 The use of apparatus in moderate climates.

## Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.

## 1.2 Warning

- Caution Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes.



To prevent possible harm to the environment or human health

from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.




The Bluetooth<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Zhong Shan City Richsound Electronic Industrial Ltd is under license. Other trademarks and trade names are those of their respective owners.


## 2. Package Contents



Portable Speaker x 1

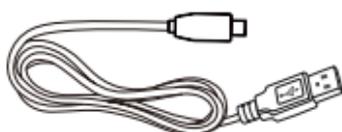

USB charging cable x 1

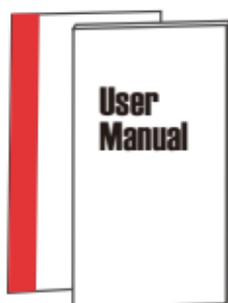


Quick Start Guide /  
User Manual



Warranty Card x 1

- Images, illustrations and drawings shown on this User Manual are for reference only, actual product may vary in appearance.

### 3. Identifying the Parts

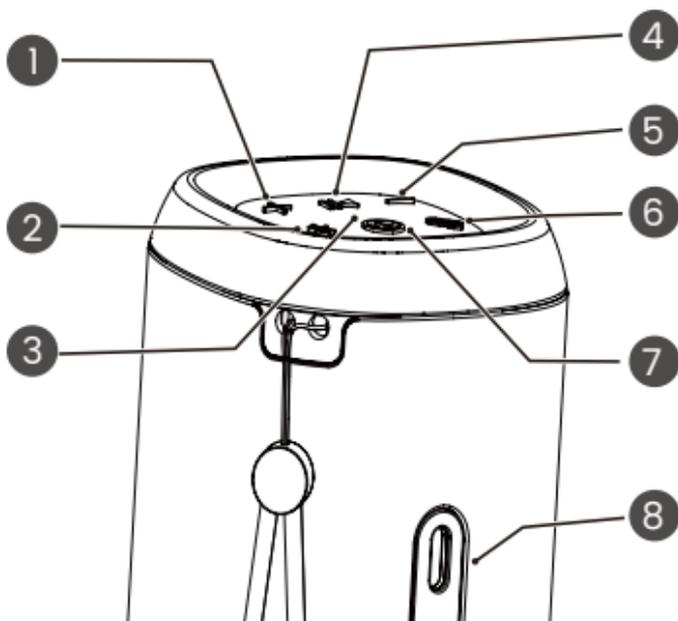

- 1 **VOL +**
  - Increase the volume.
  - Press and hold for quick volume up.
- 2 **Bluetooth button**
  - It defaults to Bluetooth pairing mode on power-up.
  - Short press to re-enter Bluetooth pairing mode.
- 3 **LED indicator**
  - Battery Indicator
  - Status Indicator
- 4 **Play/Pause button**
  - Short Press: Start, pause or resume play.
  - Double Press: Skip the next track.
  - Triple Press: Skip the previous track.
- 5 **VOL -**
  - Decrease the volume.
  - Press and hold for quick volume down.
- 6 **Bluetooth/Auracast mode button**
  - Switch between Bluetooth mode and Auracast mode.
  - The Bluetooth mode connection remains intact when switching modes.
- 7 **Power button**
  - Press to turn off the Portable Speaker.
  - Press and hold for 1 Sec. to turn on the portable speaker.
- 8 **Type-C charging port**

Button		Function
ⓘ	 x1	Power Off
	 1 Sec.	Power On
-	 x1	Volume Down
	 >1 Sec.	Volume Down Quickly
+	 x1	Volume Up
	 >1 Sec.	Volume Up Quickly
	 x1	Bluetooth Mode Auracast Mode
	 x1	Bluetooth pairing
▶	 x1	Play/pause
	 x2	Next track
	 x3	Previous track
LED		
	5%-25%	
	25%-50%	
	50%-75%	
	75%-100%	
	Bluetooth Pairing	Pairing mode: Flashing Blue Pairing successful: Solid Blue
	Auracast Pairing	<b>Master speaker state</b> Auracast Mode: Solid Blue <b>Slave speaker state</b> Pairing mode: Flashing White Pairing successful: Solid White

Press and hold the VOL – button and the ▶|| buttons to reset to factory settings.


## 4. Power supply (built-in battery)

This Portable Speaker comes with a built-in rechargeable battery.

### Charge the Portable Speaker

Connect the supplied USB charging cable to the charging port of the Portable Speaker and the USB wall outlet (5V  $\equiv$  3A).

**Warning:** If you are not going to use the Portable Speaker for a long time, turn it off and be sure to unplug its USB charging cable from the power outlet.

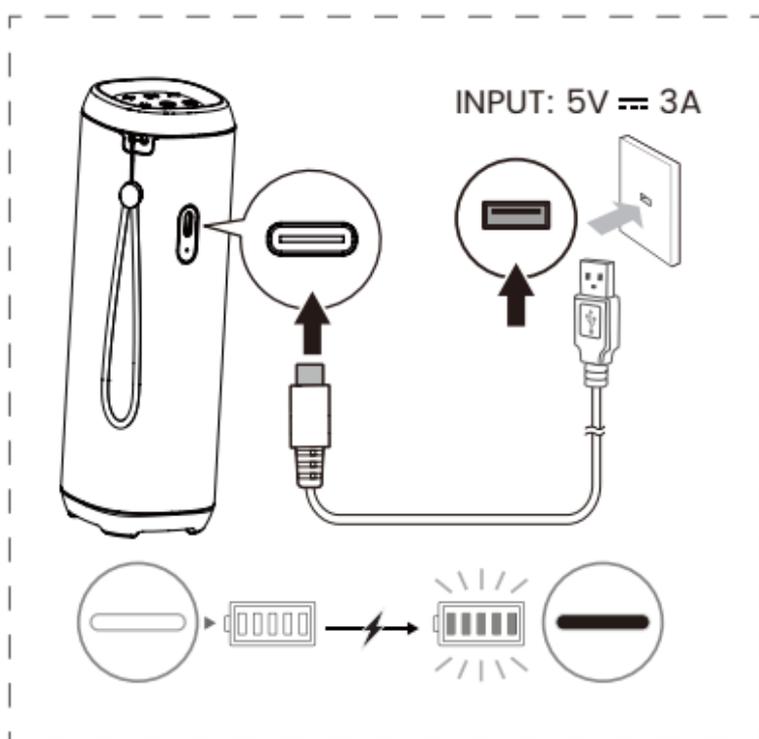

### Turn on and off

- Press the **(I)** button to turn off the Portable Speaker.
- Press and hold the **(I)** button for 1 Sec. to turn on the Portable Speaker.

### Turn off automatically

The Portable Speaker turns off automatically if the Portable Speaker does not play in Bluetooth mode or no Bluetooth device is connected in 15 minutes.

## 5. Bluetooth Operation

- Press and hold the  button for 1 Sec. to turn on the Portable Speaker.
- Press the  button to switch the Bluetooth mode, the status indicator flashing blue.
- On the Bluetooth device, switch on Bluetooth, search for and select "AS730PBT" to start connection.
- Once the Bluetooth connection is successful, the status indicator turns to solid blue, the Portable Speaker can play the music of the connected Bluetooth device.

LED State	Status
Flashing Blue	Pairing mode
Solid Blue	Pairing successful

To disconnect the Bluetooth function:

- Disable the function from your Bluetooth device.
- When the Portable Speaker is restarted, it will automatically be reconnected to the last successfully connected Bluetooth device.


Tips:

- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
- If the connection is lost, follow the instructions above to pair your device to the player again.

## 6. Auracast Operation

### Select master speaker manually

- Press and hold the  button for 1 Sec. to turn on the Portable Speaker.
- Select one Portable Speaker as master and connect to Bluetooth.
- Press the  button on both Portable Speakers to enter Auracast pairing mode.
- When Auracast pairing is connected, the slave speaker status indicator solid white.
- To exit Auracast mode, press the  button on either Portable Speaker.

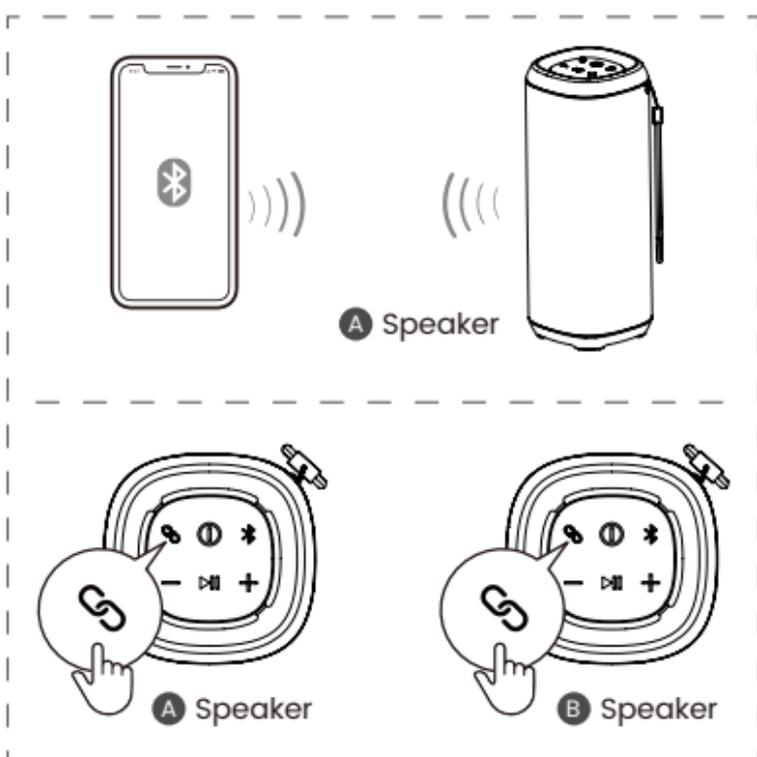

## 7. Troubleshooting

DO NOT attempt to repair the speaker, otherwise the warranty is void. If you encounter problems when using this speaker, please check the following before requesting repair service.

### No power

- When only the built-in battery is used, make sure there is enough battery power.
- This speaker will automatically turn off when no audio device is connected or an audio device is connected but not playing within 15 minutes.

### The speaker does not respond

- The speaker may run out of battery. Charge the build-in battery and then try again.
- Restore factory set up by press and hold the VOL – and ►|| buttons together to turn off the speaker. Then, restart the speaker and try again.

### The sound quality deteriorates after the speaker connects to a Bluetooth device

- Bluetooth reception is poor. Move the device closer to the speaker or remove any obstacles between the device and the speaker.

### Connection fails

- The speaker is not in pairing mode.
- The speaker has been connected to another Bluetooth device. Disconnect the device or all other connected devices and try again.

## 8. Specifications

Brand	AudioSource
Model	AS730PBT-BK AS730PBT-BL AS730PBT-PK AS730PBT-SF AS730PBT-TN

### Portable Speaker

Power	30W @10% THD RMS
Input	5V $\overline{=}$ 3A
Dimension (WxHxD)	2.6" x 6.8" x 2.6" (67 x 172 x 67 mm)
Net Weight	0.97 lbs (0.44 kg)
Frequency Response	60Hz - 20kHz

### Wireless Specification

Bluetooth Version / Profiles Bluetooth Frequency Range Bluetooth Max. Transmitting Power	V 5.4 (A2DP, AVRCP) 2402 MHz ~ 2480 MHz $\leq$ 10 dBm
------------------------------------------------------------------------------------------------	-------------------------------------------------------------

### Amplifier

AC Output Power (Maximum) (Maximum)	30 W
Battery Output Power (RMS)	30 W
Signal to Noise Ratio	$\geq$ 80 dBA

### Battery

Battery Capacity	7.4V 2600mAh (Built in rechargeable)
Battery Life	10-12 hrs (30% Volume)
Battery Charge Time	3-4 hrs

- Design and specifications are subject to change without notice.



## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**California Prop 65 Warning :**

WARNING: This product can expose you to chemicals, including styrene, which is known to the State of California to cause cancer, and Bisphenol A, which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).





